




NELSON ADAMS NACO
420 S. EST.
SAN BERNARDINO CA 92401

NOTE: DO NOT SCREW ON
BACK WALL OF POCKET!!
WILL DAMAGE TABLE &
BENCH CAN ALSO DAMAGE
LAMINATE

DRM-12TB POCKET INSTALLATION

SUGGESTED INSTALLATION INSTRUCTIONS FOR DRM POCKETS

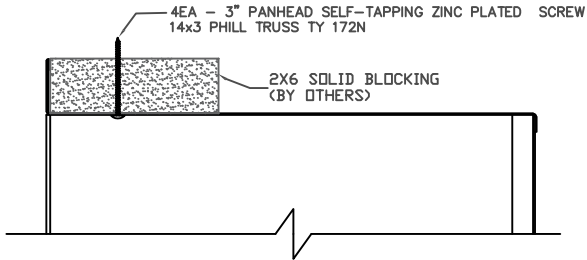

POCKET DRM-12TB
TOP SIDE VIEW DETAIL

NELSON ADAMS NACO

NOTE: IT IS THE RESPONSIBILITY OF THE CUSTOMER TO FURNISH THE REQUIRED FASTENERS.

A) ALL POCKETS NEED TO BE DRILL IN THE FIELD BEFORE INSTALLING.
USE $\frac{1}{4}$ " DRILL BIT TO DRILL HOLES INTO POCKET
SEE ELEVATION FOR HOLE LOCATIONS.

B) RECOMMENDED FASTENERS FOR WOOD SOLID BLOCKING:
USE 4EA - 3" PANHEAD SELF-TAPPING ZINC PLATED SCREW
OR EQUAL WHERE REQUIRED.

C) RECOMMENDED FASTENERS FOR CONCRETE OR MASONRY:
USE 4EA - 18-8 STEEL FLAT PHILLIPS SCREW $\frac{1}{4}$ " DIA. x $3\frac{1}{4}$ " BLUE
CLIMASEAL OR EQUAL WHERE REQUIRED.


D) USE THE PROPER FASTENERS FOR EVERY CONDITION

E) WARRANTY WILL BE VOID IF INSTALLATION IS NOT DONE
CORRECTLY OR PERFORMED BY A CERTIFIED INSTALLER.


F) AFTER POCKET INSTALLATION VACUUM OR CLEAN ALL
METAL SHAVINGS WIPE DOWN THE BACK OF POCKET UNTIL IS
COMPLETELY CLEAN

G) POCKET SHOULD BE READY TO ACCEPT ALL TABLES AND BENCHES.

SEE PLAN VIEW FOR SPECIFIC FASTENER LOCATIONS.

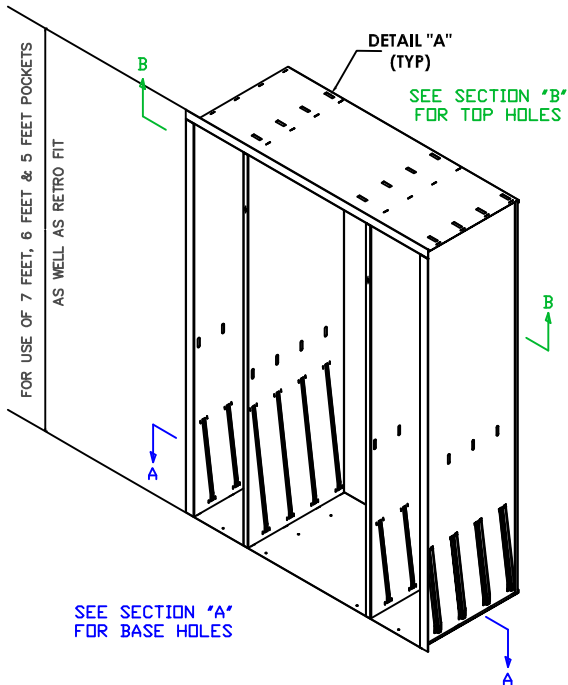


POCKET DRM-12TB ELEVATION

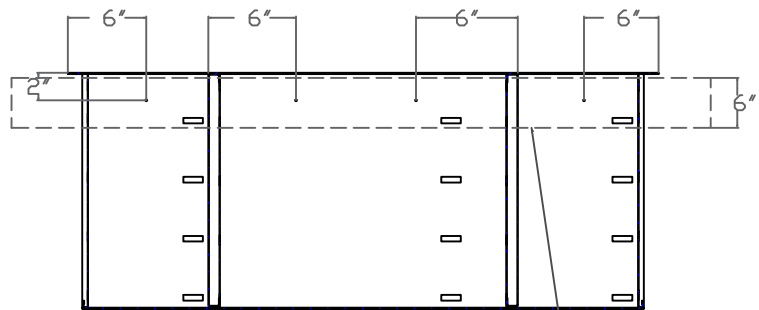


SECTION "B"

2X6 SOLID BLOCKING
(BY OTHERS)

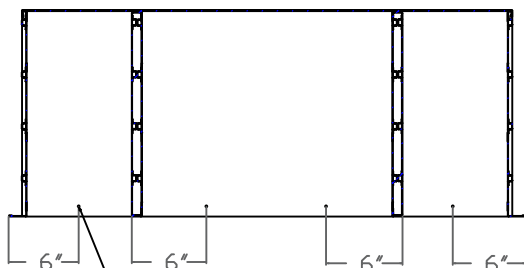

SECTION "A"

4X PREFABRICATED HOLES

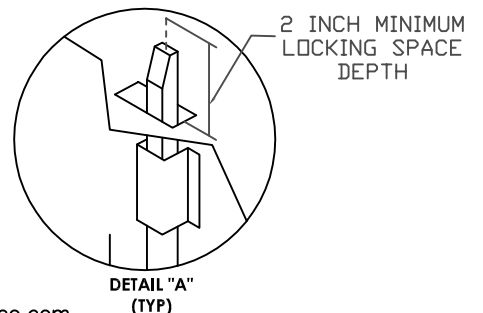

DETAIL "A"
(TYP)

2 INCH MINIMUM
LOCKING SPACE
DEPTH