



**FDW SERIES
FORBO DIRECTLY TO WALL TACKABLE SURFACES**

***SUGGESTED INSTALLATION INSTRUCTIONS FOR
FORBO DIRECTLY TO WALL TACKABLE SURFACES***

Note: Please read all instructions before installing Nelson Adams forbo. Materials must be stored, installed and used in environmentally controlled conditions. Install Nelson Adams forbo level flat against the wall at the height indicated on shop drawings. Installation with the approved adhesive.

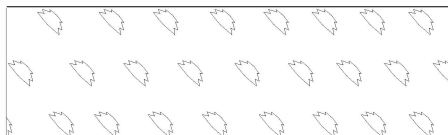


FIG. 1

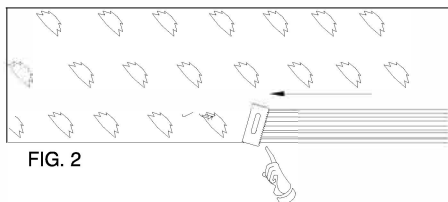


FIG. 2



FIG. 3

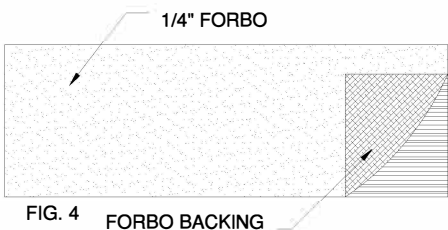


FIG. 4 FORBO BACKING

1. Inspect the forbo prior to installation and make sure acceptable quality material prior to installation. Once the forbo material has been fully inspected, measure the the walls where you're applying this product, make sure is cleaned and free of any dirt and debris and proceed to cut the forbo to the desired lengths.
2. Once you have that pieces required for that room or building, you can proceed to lay them flat on the floor, the forbo will have probably go back to its original state and it will try to coil back, so you have to make sure it's laid flat on a cleaned floor and put enough weight on both sides to hold flat, proceed and put another sheet on forbo on top until you're done with all the cut pieces one you have a full stack of forbo laying flat on the cleaned floor proceed to put some weights on both ends and leave it resting in that position for at least 24 hours, do not skip this step, is crucial for successful installation.
3. You can start with the actual installation the following day.
4. Start by removing the weight objects on the sides of each ends of the forbo material all cut forbo sheets should be completely flat for easier installation.
5. Proceed to add the approved adhesive with a trowel to the finished wall where you're installing the forbo once that surface area is filled with adhesive. Proceed to install the forbo material. (2 installers required for this application) and the forbo has been properly installed to the desired height A.F.F. Use a roller to and use consistent pressure points through out the entire forbo sheet to make sure they're no air pockets.
6. Proceed with the other forbo sheets, if they're following a specific sequential order make sure they follow the order they're supposed to or just label the sheet to make it easier to identify.
7. Once you complete installing all the forbo sheets, inspect all the surfaces and use the roller to flattened those possible air pockeks until they're completely flat.
8. Clean the dirty surfaces of forbo with water and soap.
9. Forbo surfaces should be ready for use.
10. 180sf coverage per 1ea 5 gallon pail of adhesive

Note: Installation to be done by at least 2 qualified installers.