




Glass Markerboard - Installation Instructions

Tools Needed:

- Edge Grips (Provided)
- Wall Anchor (Provided)
- Phillips Screws (Provided)
- Suction Cup Lifter
- Level
- Safety Glasses/Gloves

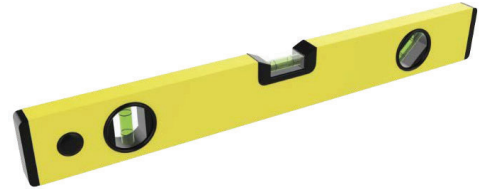

Installation Instructions:

1. Open pallet with the material and inspect if any damage is located on material. Contact your sales rep immediately if damage is found.
2. Using your level establish the height for the edge grips
3. Locate the precut holes on glass marker board, using your measuring tape, measure the distance between the precut holes.
4. Drill a 1/4" hole on the established marking for the edge grips and insert the provided wall anchors until is flushed with wall.
5. Line up the back side of the edge grip with the wall anchor and Screw the Phillips screw provided.
6. Insert threaded studs into the back side of the edge grip and insert washer. **Figure A & Figure B**
7. Use your suction cup lifter to lift the glass marker board. Line up the threaded studs with the precut holes and insert the studs into the precut holes. **Figure C**
8. Insert washer and screw the head of the edge grip to the stud thread. **Figure D**

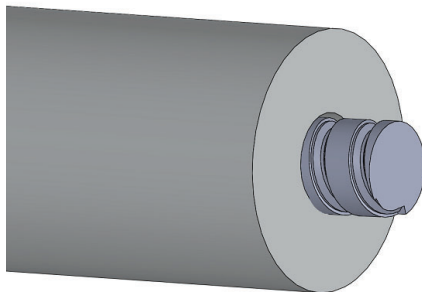


Figure A

Figure C


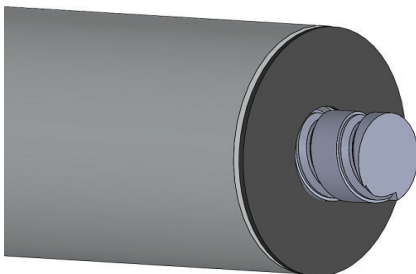


Figure B

Figure D

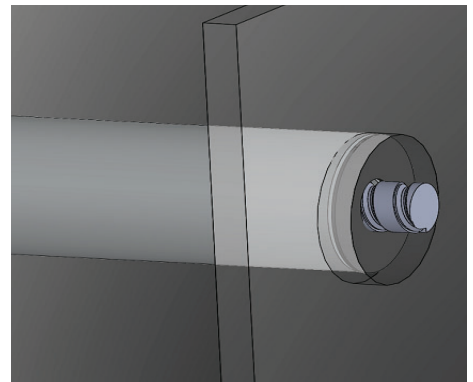