




NELSON ADAMS NACO
420 S E STREET
SAN BERNARDINO, CA
92401 PH 877.810.4080 PH
909.879.0421

HSS SURFACE MOUNT SLIDER UNIT DRY MARKERBOARD, CHALKBOARD AND TACKBOARD

SUGGESTED INSTALLATION INSTRUCTIONS FOR HSS SURFACE MOUNT SLIDER UNIT WITH OPTIONAL FIXED BACK PANEL

Note: Please read all instructions before installing Nelson Adams whiteboards and tackboards. Materials must be stored, installed and used in environmentally controlled conditions. Install Nelson Adams markerboards and tackboards level flat against the wall at the height indicated on shop drawings. Installation with mounting clips.

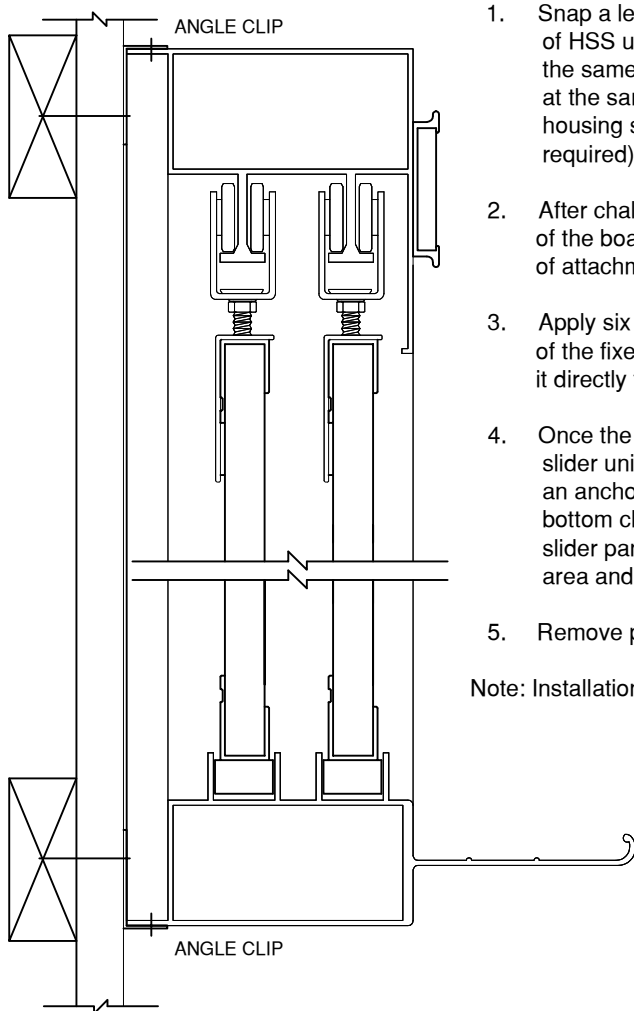

1. Snap a level line at the required height of the bottom tubular housing of HSS unit. locate the mounting clip location along the bottom and repeat the same process on the top align the housing and start anchoring the top and bottom at the same time 1 installer on top and the other installer on the bottom housing standard spacing can be 16" o.c. or 24" o.c. max. (If a fixed back panel is required) See step 3.
2. After chalk tray has been properly installed, attach all clips required for the top of the board at 16" o.c. or 24" o.c max. (If tray is already attached - use the same method of attachment as the tackboard detail shown on bottom left corner illustration.)
3. Apply six 3" circles of construction adhesive or Henry's #237 or #317 on the back of the fixed back panel 3" circles on the back of the board. Lift the board and anchor it directly to the wall drill pilot holes and then counter sink the holes for a clean finished.
4. Once the fixed back panel has been installed proceed to install the housing of the slider unit mount all the bottom clips followed by the top clips, insert assembled housing an anchor unit one installer working on top left to right and the other installer on the bottom clips right to left. After housing has been properly install proceed to hang the slider panels back track first and lastly the slider panels for the front track. Clean entire area and clean the channel guide track.
5. Remove porcelain protective film and clean writing surface prior to use.

Note: Installation to be done by at least 2 qualified installers.