



NELSON ADAMS NACO
420 S E ST.
SAN BERNARDINO, CA. 92401
PH 877.810.4080 PH 909.383.0819


INSTALLATION INSTRUCTIONS BLADE TRAY & STANDARD BOX TRAY MARKERBOARD, CHALKBOARD AND TACKBOARD

Note:

Please read all instructions before installing any Nelson Adams Boards. Materials must be stored, installed and used in environmentally controlled conditions.

Install Nelson Adams Boards at a wall minimum of level 5, smooth flat wall. (wall finished by others)

Installation with mounting angle clips.

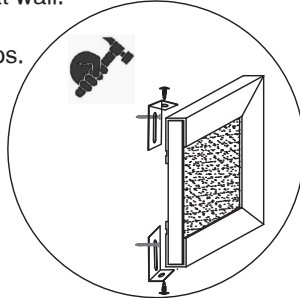

FOLLOW THESE STEPS:

1. Using a laser level find your required chalk tray height @ center of wall. Mark your center height.
2. Using a chalk line snap a level horizontal line (depending width of board), start with **bottom line**.
3. For **top line**, follow same process.
4. Find backing or studs (by others) (@ every 16" o.c. or 24" o.c. max) starting from bottom, align bottom of clip at $2\frac{1}{4}$ " & add screw @ 2" from above required chalk tray height. (Screws recommended per backing).
5. Depending on the height of board, continue with TOP angle clips.

4' H board align bottom of clip $46\frac{1}{4}$ " & add screw @ $47\frac{1}{4}$ "

5' H board align bottom of clip $57\frac{7}{8}$ " & add screw @ 59"

6. Lift & sit board firmly on bottom angle clip while holding & pushing against the wall. While still holding board at all times screw top & bottom angle clips using manufacturer self-tapping screws.

7. Using a hammer slightly adjust clips for a firmer & tighter reinforcement.

8. Remove porcelain protective film and clean writing surface prior to use.

Note: Installation to be done by at least 2 qualified installers.

(Adhesive recommended only for $\frac{1}{2}$ " fiberboard Tack Boards)
(1 Bucket for every 600sqft)

