



NELSON ADAMS NACO
420 S E Street
San Bernardino, CA. 92401
PH 877.810.4080 PH 909.879.0421

e³ PORCELAIN SKINS


*SUGGESTED INSTALLATION INSTRUCTIONS FOR PORCELAIN *e³* SKINS*

Note: Please read all instructions before installing Nelson Adams *e³* porcelain skins. Materials must be stored, installed and used in environmentally controlled conditions. Install Nelson Adams *e³* flat against the existing writing surface as indicated on shop drawings. Keep in mind the skins will be undercut to fit inside of the existing writing surface.


1. Apply three 3" circles of construction adhesive, Henry's #317 or Henry's #237 using a trowel spread the adhesive as shown in step 1 in the illustration below.
2. Spread the adhesive evenly through the entire writing surface as shown in step 2.
3. Proceed to adhere the *e³* porcelain skin on to the existing chalkboard or markerboard as shown on step 2.
4. Using a standard roller run it up and down the full length of the unit.
5. Remove porcelain protective film and clean writing surface prior to use.

Note: Installation to be done by at least 2 qualified installers.

- * All skins need to be installed inside the finished trim, please verify all your dimensions prior to ordering material.
- * If you're resurfacing a 16'-0" chalkboard unit, we recommend using: 2ea - 4'-0" x 8'-0" pieces.

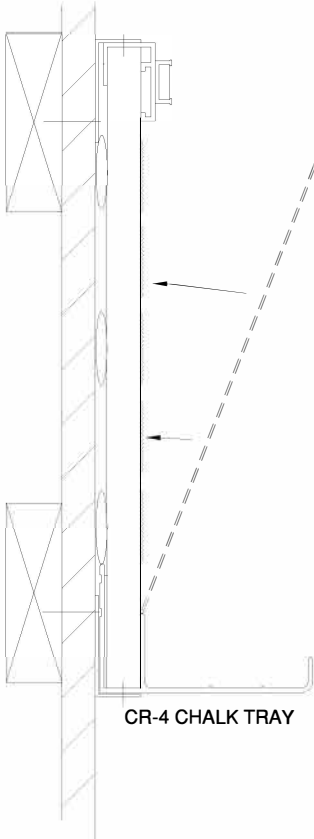

CR-4 CHALK TRAY

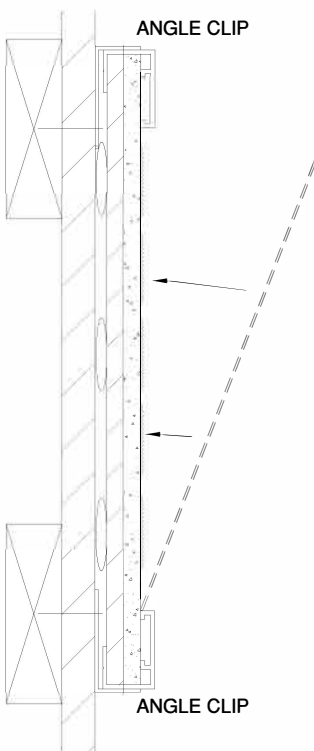

ANGLE CLIP

ANGLE CLIP

